





移走电机  
Remove the motor.



拆除放气丝堵  
Dismantle the vent plug



拆除拉杆螺母  
Dismantle the pull rod nuts



移走电机座  
Remove the motor stool.







